



iRidium Util

used for receiving serial numbers of
controllers
actual version: **2.2**

iRidium Util included in
iRidium Environment for
installation on
Windows 7/8 based PC



Serial number

a controller identifier you need for activation of an iRidium Site license. It is used only for AMX, Crestron, KNX, KNX IP BAOS, HDL, Global Cache, Helvar equipment. Serial numbers of controllers can be received with the help of iRidium Util included in iRidium Environment for PC.

Contents

- [1 Receiving Serial Numbers of AMX Controllers](#)
- [2 Receiving Serial Numbers of KNX IP BAOS](#)
- [3 Receiving Serial Numbers of KNX IP Routers \(Logic Machine*\)](#)
- [4 Receiving Serial Numbers of Crestron Controllers](#)
- [5 Receiving Serial Numbers of HDL-BUS Pro IP Modules](#)
- [6 Receiving Serial Numbers of Global Cache](#)
- [7 Receiving Serial Numbers of Helvar](#)

Receiving Serial Numbers of AMX Controllers

1. Select the type of the controller in the dropdown list: **AMX**.
2. Write the local IP-address of the controller the serial number of which you want to receive.
3. Indicate the number of the port for request of the serial number. It is **1319** for AMX.
4. Indicate the login and password for connection to the controller when using secure connection .
5. Press the "Request".
6. Copy the controller identifier from the "Serial" window with the help of the Copy button.

The screenshot shows the 'iRidium Util' application window. It contains several input fields: 'Device' with a dropdown menu showing 'AMX', 'Host' with '192.168.0.150', 'Port' with '1319', 'Login' with 'user', and 'Password' with masked characters. Below these is an 'Instruction' label and a yellow 'Request' button. At the bottom, there is a 'Serial' field displaying '210514x5270096' and a 'Copy' button.

Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

[↑ Back](#)

Receiving Serial Numbers of KNX IP BAOS

1. Select the type of device in the dropdown list: **BAOS 1x (for BAOS 770)** or **BAOS 2x (for BAOS 771/772)**.
2. Write the local IP-address of BAOS the number of which you want to receive.
3. Indicate the number of the port for request of the serial number. It is **12004** for BAOS by default.
4. Press the "Request" button.
5. Copy the controller identifier from the "Serial" window with the help of the Copy button.

This screenshot shows the 'iRidium Util' application window with different settings. The 'Device' dropdown is set to 'BAOS 2x'. The 'Host' field contains '192.168.0.163' and the 'Port' field contains '12004'. The 'Login' and 'Password' fields are empty. The 'Request' button is visible. The 'Serial' field at the bottom displays '00c501000033' with a 'Copy' button next to it.


Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

[↑ Back](#)

Receiving Serial Numbers of KNX IP Routers (Logic Machine*)

* "Site License (LM)" can be activated for such devices as Logic machine 2, Logic machine 3 or Logic machine 3 Re:actor. But the license is also suitable for any other KNX IP router with support of the KNXnet/IP Tunneling protocol. The name "LM" is given to the license because the license supports up to 10 concurrent connections to the bus of LM devices, KNX IP BAOS – up to 5 connections, regular KNX IP routers – only 1 connection to the bus at a time.

1. Select the type of device in the dropdown list: **KNX**
2. Write the local IP-address of the KNX IP router the serial number of which you want to receive.
3. Indicate the number of the port for request of the serial number. It is **3671** by default.
4. Press the "Request" button.
5. Copy the controller identifier from the "Serial" window with the help of the Copy button.

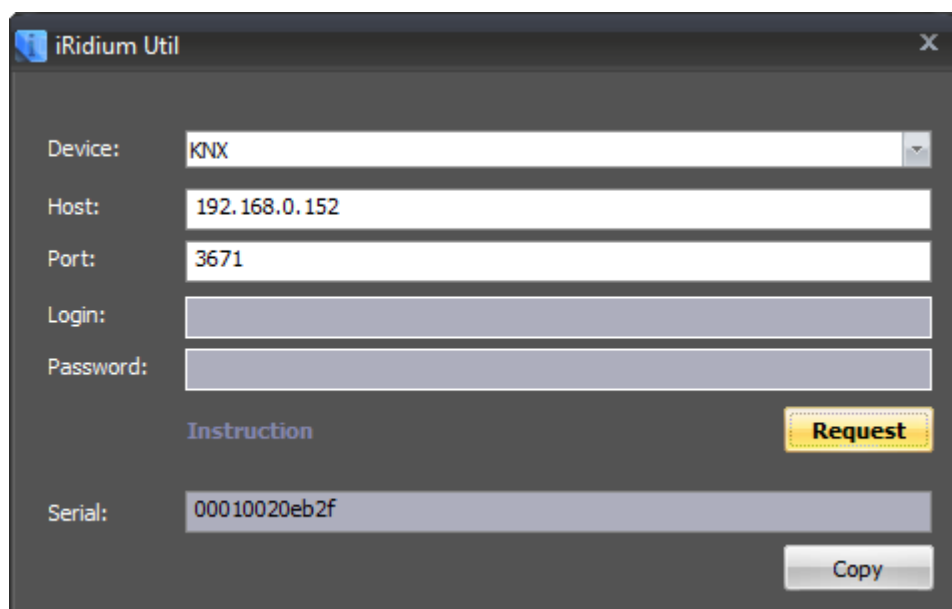


The screenshot shows the 'iRidium Util' application window. It has a dark gray background. At the top left is the 'iRidium Util' title bar with a close button. Below the title bar, there are several input fields and buttons. The 'Device:' field is a dropdown menu with 'KNX' selected. The 'Host:' field contains '192.168.0.152'. The 'Port:' field contains '3671'. The 'Login:' and 'Password:' fields are empty. Below these fields is a blue 'Instruction' label. To the right of the 'Instruction' label is a yellow 'Request' button. Below the 'Request' button is a 'Serial:' field containing the text '00010020eb2f'. At the bottom right of the window is a gray 'Copy' button.

Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

[↑ Back](#)

Receiving Serial Numbers of Crestron Controllers

1. Select the type of controller the dropdown list: **Crestron**.
2. Write the local IP-address of the controller which number you want to receive.
3. Indicate the number of the port for request of the serial number. It is **41795** for Crestron by default.
4. Indicate the login and password for connection to the controller when using secure connection.
5. Press the "Request" button.
6. Copy the controller identifier from the "Serial" window with the help of the Copy button.

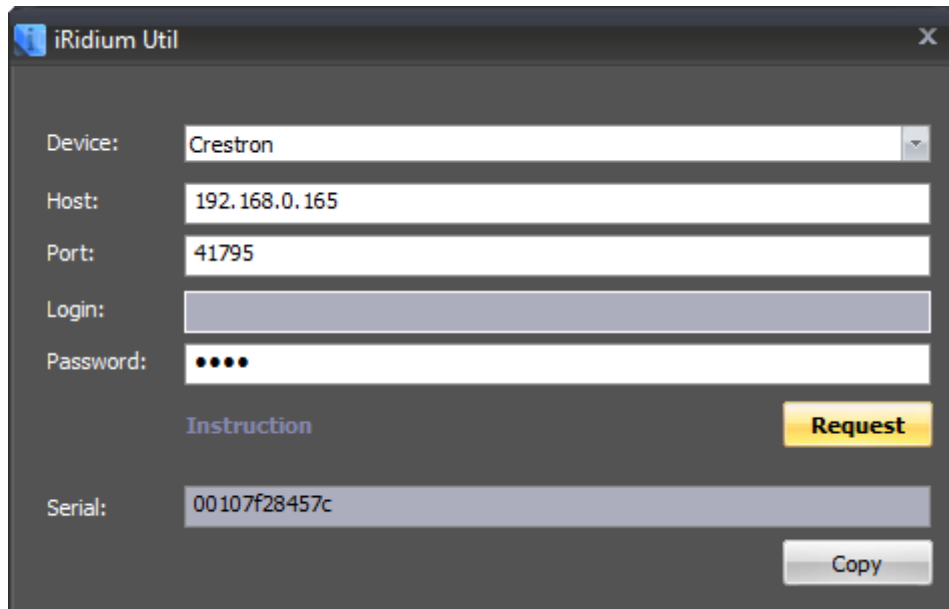

iRidium Util

Device: Crestron

Host: 192.168.0.165

Port: 41795

Login:

Password: ••••

Instruction Request

Serial: 00107f28457c Copy


Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

[↑ Back](#)

Receiving Serial Numbers of HDL-BUS Pro IP Modules

- ⚠ Serial numbers can be received only for **SB-DN-1IP (generation 4), Factory Model: HDL-MBUS01IP.431** IP modules.
- ⚠ The HDL-MBUS01IP.431 module should have the firmware **HDL_V04.03U**
- ⚠ The serial number can be received only locally (when you are in one network with the IP module)

1. Select the type of device in the dropdown list: **HDLBus (local)**
2. Write the broadcast address for sending requests to the IP module: **255.255.255.255**.
3. Indicate the number of the port for request of the serial number. It is **6000** for HDL-BUS Pro by default.
4. Indicate the login and password for connection to the controller when using secure connection.
5. Press the "Request" button.
6. Copy the controller identifier from the "Serial" window with the help of the Copy button.

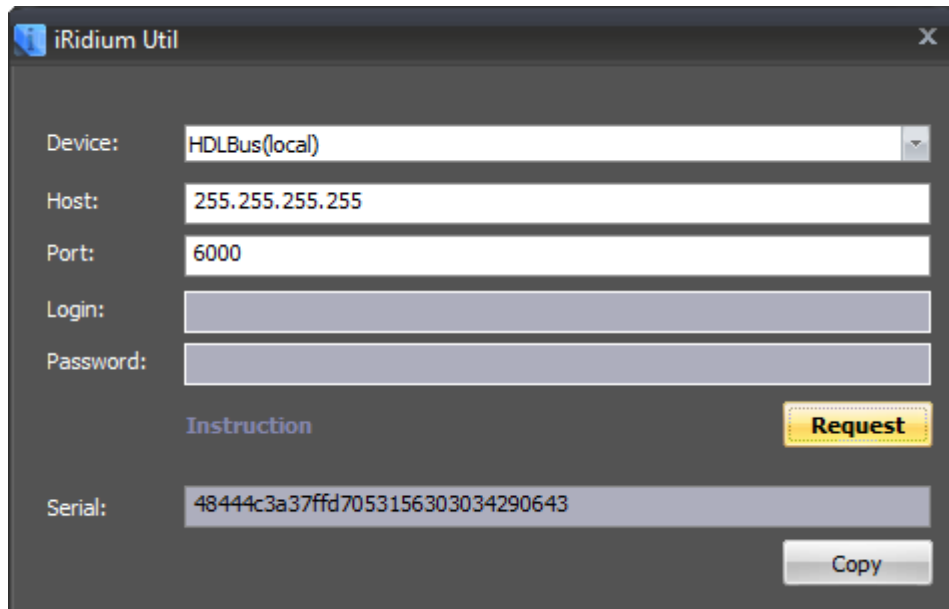

iRidium Util

Device: HDLBus(local)

Host: 255.255.255.255

Port: 6000

Login:

Password:

Instruction Request


Serial: 48444c3a37ffd7053156303034290643

Copy


Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

[↑ Back](#)

Receiving Serial Numbers of Global Cache

 Serial numbers can be received for all models of Global Cache network converters.

1. Select the type of controller the dropdown list: **Global Cache**.
2. Write the local IP-address of the converter in the IPv4 format.
3. Indicate the number of the port for request of the serial number: **4998**.
5. Press the "Request" button on the panel of the iRidium Util app.
6. Copy the identifier from the "Serial" window with the help of the Copy button.

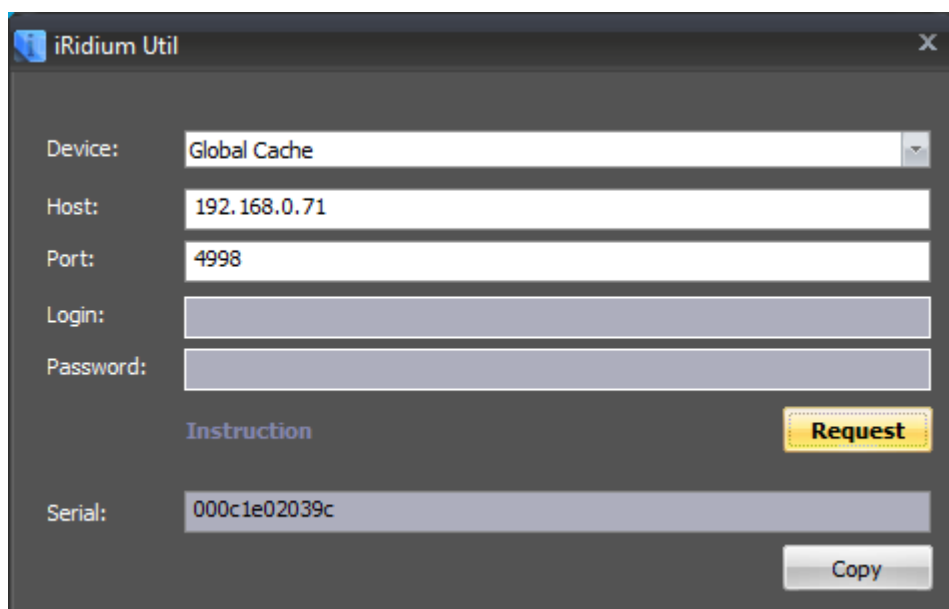

iRidium Util

Device: Global Cache

Host: 192.168.0.71

Port: 4998

Login:

Password:

Instruction Request

Serial: 000c1e02039c

Copy


Do not write serial numbers manually! Any mistake can lead to non-operability of your license!

Receiving Serial Numbers of Helvar

⚠ Site License for Helvar **supports**: HelvarNet (TCP), HelvarNet (UDP).

⚠ Site License for Helvar **does not support**: HelvarNet Internal (UDP), Helvar AV (RS232).

1. Select the device type in the dropdown list: **Helvar**
2. Write the IP-address of the Helvar router.
3. Press the "Request" button on the panel of the iRidium Util app.
4. Copy the controller identifier from the "Serial" window with the help of the Copy button.

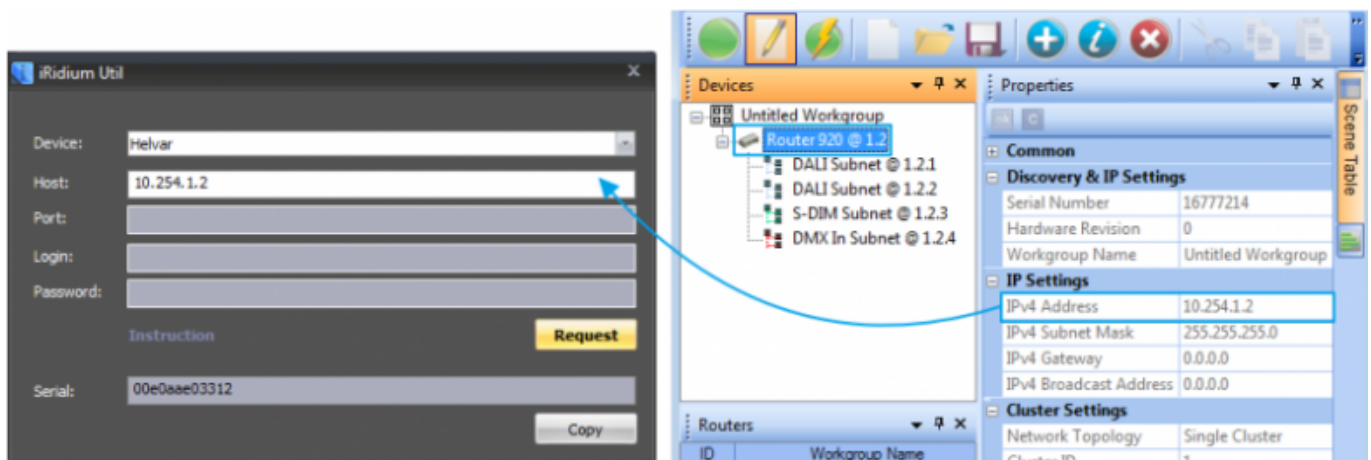

Do not write serial numbers manually! Any mistake can lead to non-operability of your license!